





DESCRIPTION Water-borne, ready-to-use filler for filling gypsum board seams. Filling ability: 2 mm with no

cracking.

RECOMMENDED USES Interior walls and ceilings on dry premises.

PRODUCT FEATURES For filling the seams between gypsum boards and, in particular, attaching sealing strips. Apply

manually with a steel trowel or mechanically with a "Bazooka" automatic taping tool.







# PRESTO J

**TECHNICAL DATA** 

Colour Shades Light gray

Can sizes 3 l, 10 l

Application method Apply with a steel trowel or automatic taper.

Drying time (23°C and 50% relative air humidity)

2-24 hours depending on layer thickness, temperature and the relative humidity of

the air.

**Density (kg/l)** 1.4 kg/l, ISO 2811

Volume solids (%) 46

Storage Protect from frost. Badly closed or short cans endure badly long-time storage.

The above information is not intended to be exhaustive or complete. The information is based on laboratory tests and practical experience, and it is given to the best of our knowledge. The quality of the product is ensured by our operational system, based on the requirements of ISO 9001 and ISO 14001. As manufacturer we cannot control the conditions under which the product is being used or the many factors that have an effect on the use and application of the product. We disclaim liability for any damages caused by using the product against our instructions or for inappropriate purposes. We reserve the right to change the given information unilaterally without notice.



## PRESTO J

### **APPLICATION INSTRUCTIONS**

## **Application conditions**

The surface to be leveled must be dry, the temperature of the surface and air at least +10 °C and the relative humidity of the air below 80 %.

#### Surface preparation

Remove any adhesion-reducing dust and loose material by brushing.

## **Application**

Manually:

Spread Presto J Saumatasoite with a steel trowel so that it fills the dent formed by the thinned edges. Press the sealing strip into the filler with the steel trowel. Spread any effusive filler on top of the joint tape. If necessary, add more filler on top of the joint tape until the joint is filled.

Mechanically:

Fill the machine with Presto J Saumatasoite. Work on the joint following the instructions provided by the manufacturer of the device.

When the base filler has dried, level the surface with one or two coats of Presto LH Kevyttasoite or Presto R Telattava filler. After the filler has dried, sand the surfaces with sand paper.

## Cleaning of tools

Clean tools with water.

### Environmental and waste disposal

Deliver empty packaging and hardened mortar to a recycling point or waste tip according to local regulations.

### HEALTH AND SAFETY LABELLING according to Regulation (EC) No. 1272/2008


Contains 1,2-benzisothiazol-3(2H)-one (BIT) and reaction mass of: 5-chloro-2-methyl-4-isothiazolin-3-one [EC no. 247-500-7] and 2-methyl-2H-isothiazol-3-one [EC no. 220-239-6] (3:1) (C(M)IT/MIT (3:1)). May produce an allergic reaction. Wear protective gloves. This product contains a biocidal product for the preservation of the product during storage. Contains: reaction mass of: 5-chloro-2-methyl-4-isothiazolin-3-one [EC no. 247-500-7] and 2-methyl-2H-isothiazol-3-one [EC no. 220-239-6] (3:1) (C(M)IT/MIT (3:1)).

The above information is not intended to be exhaustive or complete. The information is based on laboratory tests and practical experience, and it is given to the best of our knowledge. The quality of the product is ensured by our operational system, based on the requirements of ISO 9001 and ISO 14001. As manufacturer we cannot control the conditions under which the product is being used or the many factors that have an effect on the use and application of the product. We disclaim liability for any damages caused by using the product against our instructions or for inappropriate purposes. We reserve the right to change the given information unilaterally without notice.



## PRESTO J

EN 13963:2005

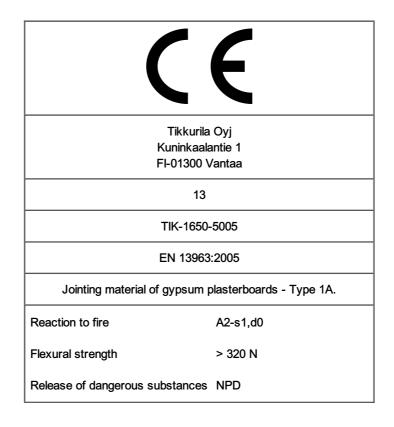

The above information is not intended to be exhaustive or complete. The information is based on laboratory tests and practical experience, and it is given to the best of our knowledge. The quality of the product is ensured by our operational system, based on the requirements of ISO 9001 and ISO 14001. As manufacturer we cannot control the conditions under which the product is being used or the many factors that have an effect on the use and application of the product. We disclaim liability for any damages caused by using the product against our instructions or for inappropriate purposes. We reserve the right to change the given information unilaterally without notice.